

VIN: Vehicle: 3'/F30/SEDAN/335i/N55/AUTO/USA/LL/2012/07
 System Version: 3.47.10.13054 Data Version: R3.47.10.13054

Electronic emergency release of the parking lock

BMW Group Mobile Service




Important! Before releasing the parking lock, secure the vehicle against rolling away!



Warning! Always observe all instructions for the electronic emergency release:

- Emergency release is only possible when the engine does not start and the starter motor turns.
 - Should it be necessary to perform an emergency release although the engine starts, it is possible to pull out the fuse for the electric fuel pump.
 - The emergency release is active for 15 min. This time is extended by a further 15 min as soon as a wheel speed signal is registered. After this time the parking lock is applied without a message.
- The time period is dependent on the battery capacity!**
- A vehicle that has undergone an electronic emergency release must not be towed away on its own axles. The emergency release serves exclusively as a manoeuvring aid!

1. Press and hold the brake pedal for the entire process.
2. Press the start/stop button. The starter motor turns for a specific time.

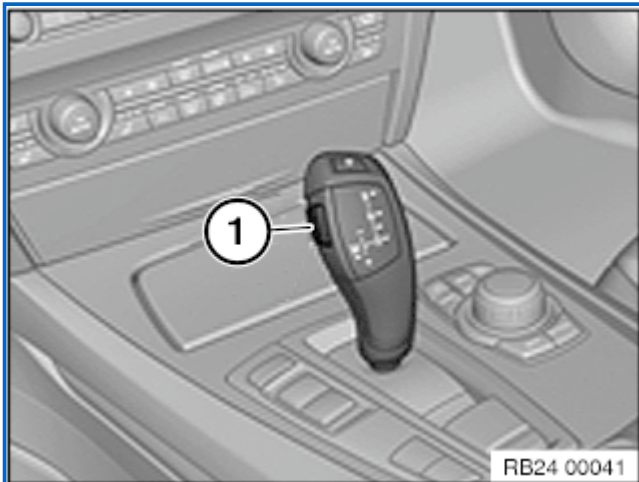

Press and hold the release button (1) for the entire process.

Move the GWS (2) to the selector lever position N for at least 4 s. An acoustic signal or a text message is output, depending on the vehicle.

Move the GWS back to the initial setting.

Briefly move the GWS to the selector lever position N again and back again to the initial setting.

Release the release button. The display on the gear selector switch changes to "N".

The parking lock is now electronically unlocked!



Release the brake pedal. Starter motor stops turning and the vehicle can be free-wheeled.



Warning! The parking lock is reactivated without a message when the start/stop button is pressed again.